

1 How to Install Phone As PC's Modem

For creating dial up connection, please contact Service Provide to get the “phone number”, “user name” and “password”

1.1 Computer Configuration

1.1.1 USB driver Installation

- Install the file Setup.exe



Figure 1: USB Driver Installation

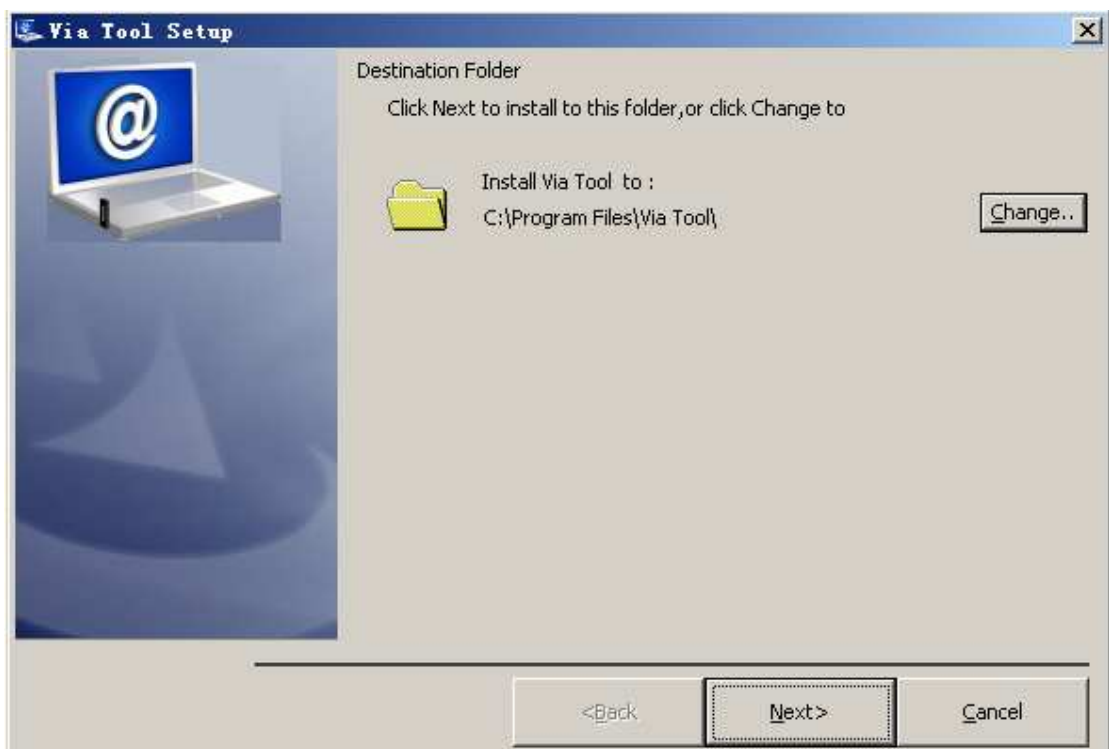


Figure 2: USB Driver Installation

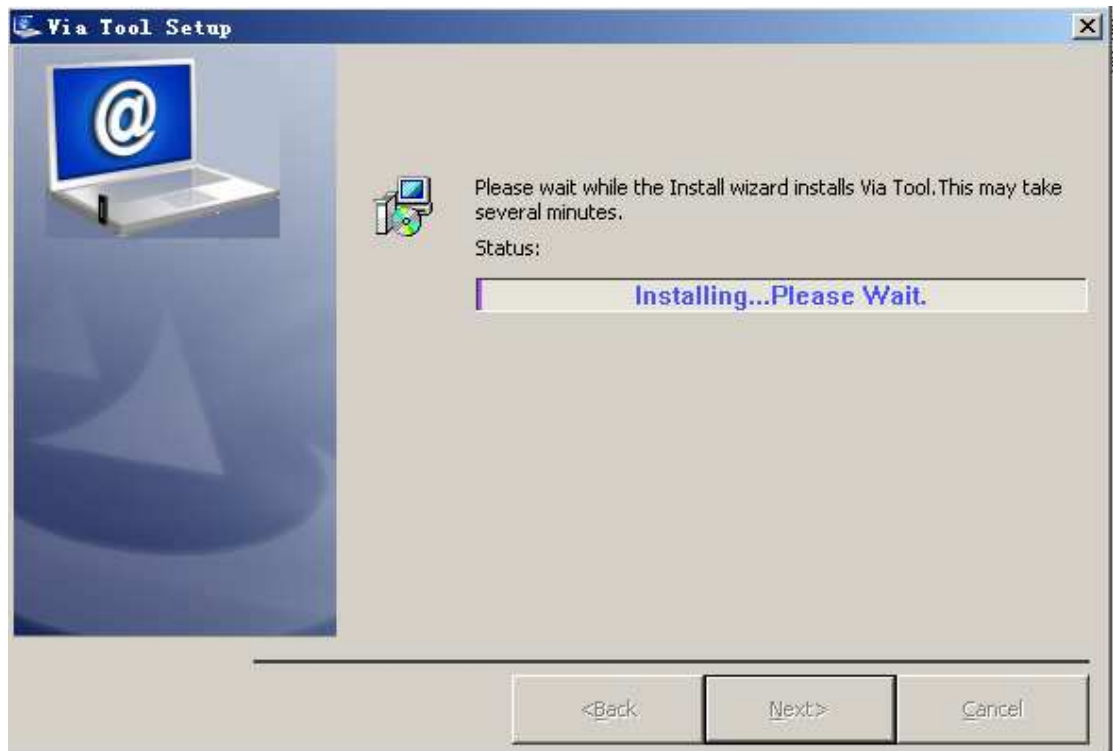


Figure 3: USB Driver Installation

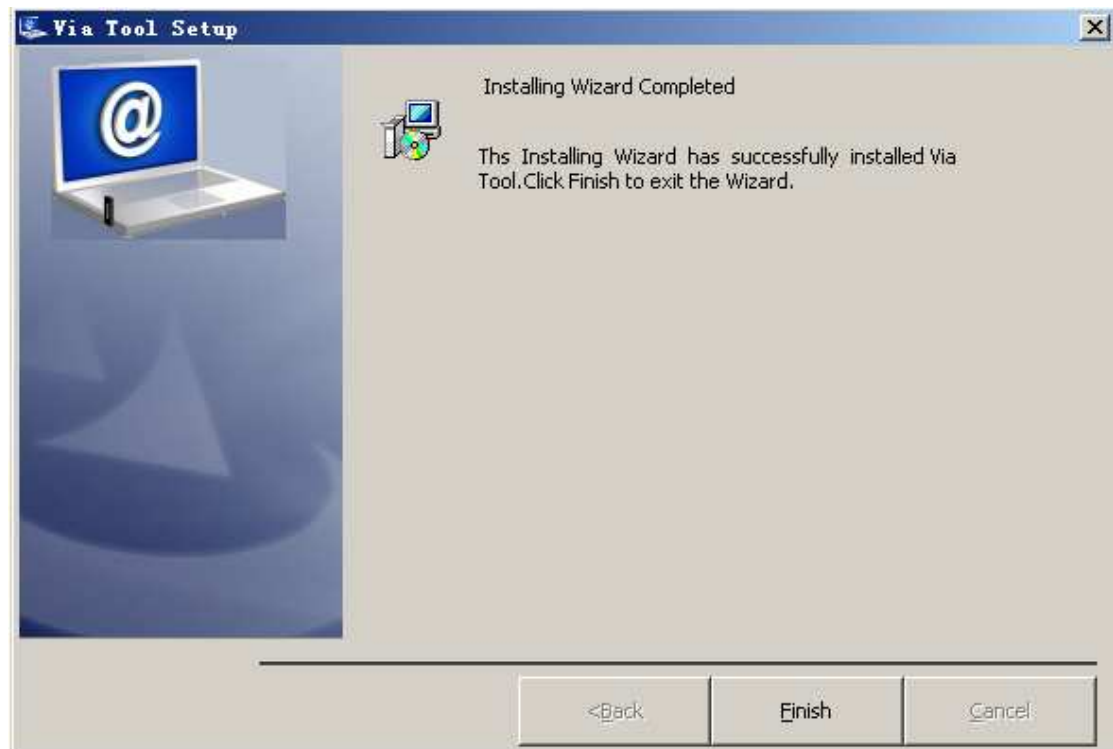


Figure 4: USB Driver Installation

- Press “FINISH”
- The driver installation is complete

1.1.2 Create dial-up Connection

This section shows you how to create a dial-up connection using the PHONE as a modem (you should follow the previous section to install the modem drive on the computer).

- Open ”Control Panel-> Network and Dial-up Connections”, click ”Make New Connection”,
- You will see a “Network Connection Wizard” window; press “Next>” button (figure 9)

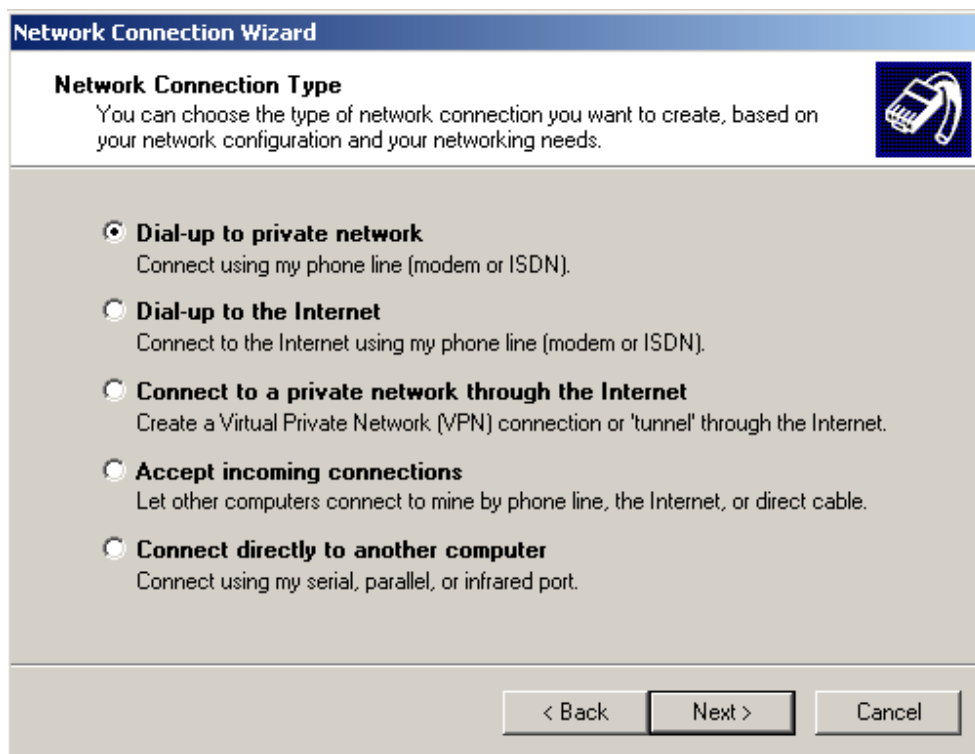


Figure 5: Network Connection Wizard

- Choose “VIA Telecom CBP USB modem” (figure 10)

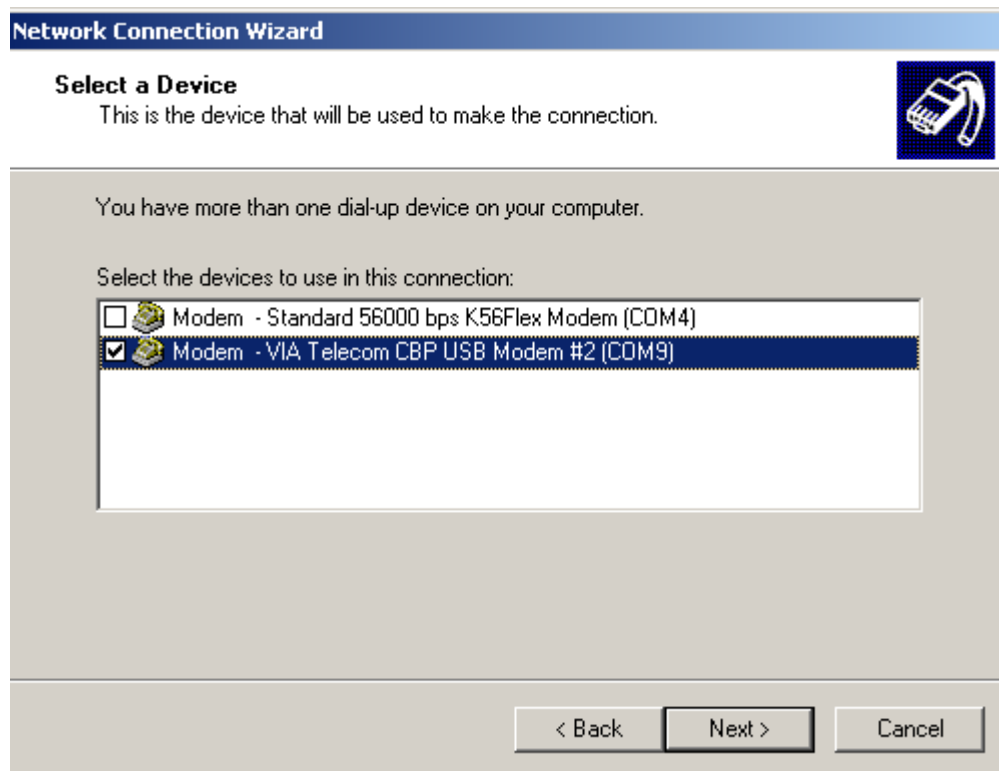


Figure 6: Network Connection Wizard

- Enter the "Phone number", Press "Next>" until the "Connect Dial-up Connection" window is shown.

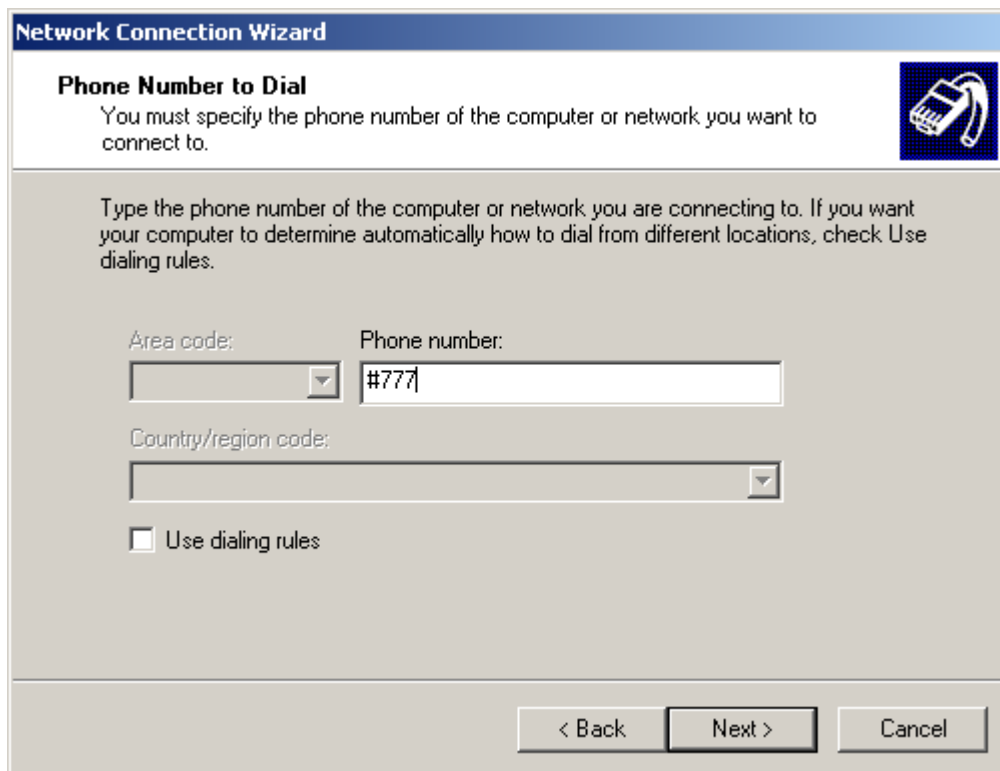
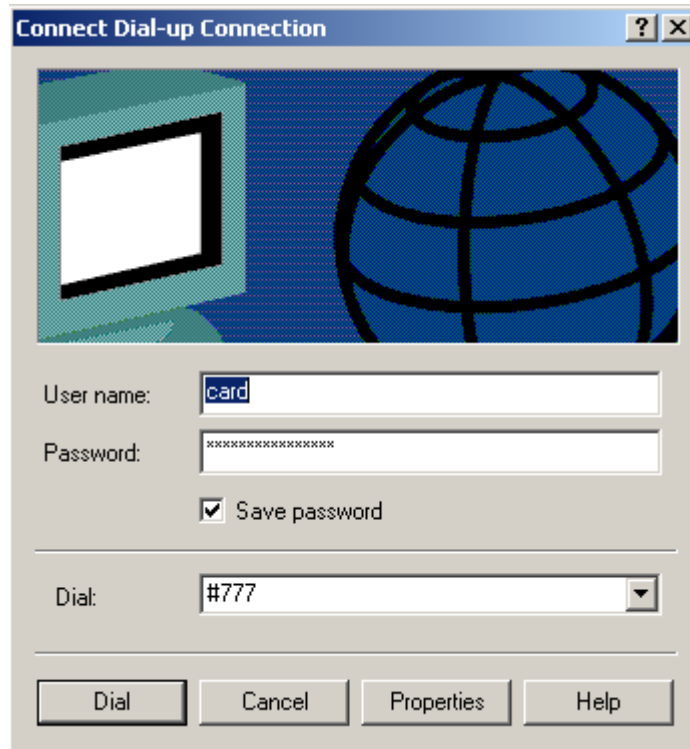


Figure 7: Network Connection Wizard

- Enter "card" in the "User name" and "Password" fields in the "Connect Dial-up Connection" window (figure 12).
- Place a checkmark in the "Save password" checkbox
- Click "Dial".

**Figure 8: Dial-up Connection**

1.2 Configure PHONE

- Make sure that the baud rate of the phone is set to 230400. To verify or change the baud rate, go to "Settings" menu, then choose "Port Speed" sub-menu.
- Make sure that the USB cable is properly connected to the phone on one side and the PC on the other side.
- Once the configuration of both the PC and the phone is complete, re-start your Phone.